

## Product Positioning Guide For Nike Kits - PORTUGAL AWAY

### Front Number



**A** Centrally - 20mm

### Name & Number



#### Name

**A** Adult Mens:- Centrally - 80-120mm

Youth/Womens:- Centrally - 80-120mm

Infant:- Centrally - 80-120mm


#### Number

**B** Adult Mens :- Centrally - 45-50mm

Youth/Womens:- Centrally - 35-40mm

Infant:- Centrally - 35-40mm

### Short Number

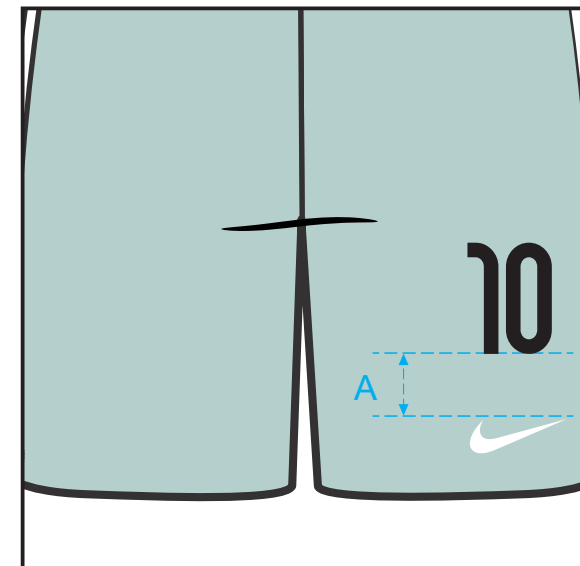

**A** Adult Mens:- 25mm

Youth/Womens:- 15mm

Infant:- 10mm

#### Application Instructions

Temperature: 145 Degrees Celsius

Time: 15 Seconds

Pressure: V.Firm/ 4 Bar

Peel: Cool

Please ensure the application area is covered carefully with a Teflon sheet.

**Note:** This positioning information is intended as a guide only for adult, youth and infant kits.

Spacing may need to be reviewed in individual circumstances for the best fit to be achieved.

## Product Positioning Guide For Nike Kits - PORTUGAL HOME

### Front Number



**A** Centrally - 20mm

### Name & Number




#### Name

<b>A Adult Mens:-</b>	Centrally - 80-120mm
<b>Youth/Womens:-</b>	Centrally - 80-120mm
<b>Infant:-</b>	Centrally - 80-120mm

#### Number

<b>B Adult Mens :-</b>	Centrally - 45-50mm
<b>Youth/Womens:-</b>	Centrally - 35-40mm
<b>Infant:-</b>	Centrally - 35-40mm

### Short Number

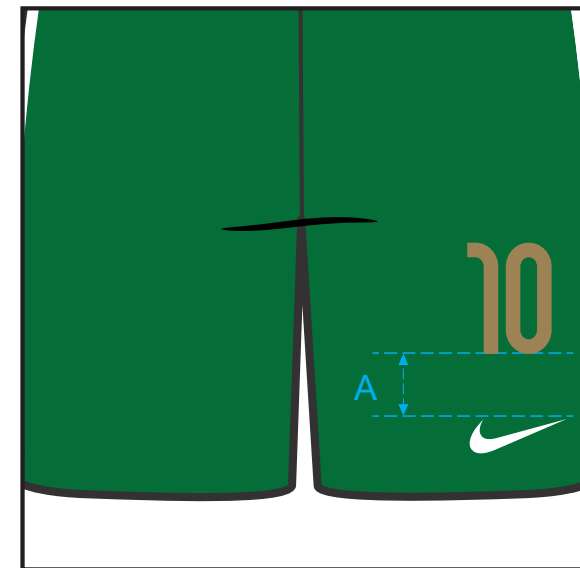

<b>A Adult Mens:-</b>	25mm
<b>Youth/Womens:-</b>	15mm
<b>Infant:-</b>	10mm

#### Application Instructions

Temperature: 145 Degrees Celcius  
Time: 15 Seconds  
Pressure: V.Firm/ 4 Bar  
Peel: Cool

Please ensure the application area is covered carefully with a Teflon sheet.

**Note:** This positioning information is intended as a guide only for adult, youth and infant kits. Spacing may need to be reviewed in individual circumstances for the best fit to be achieved.